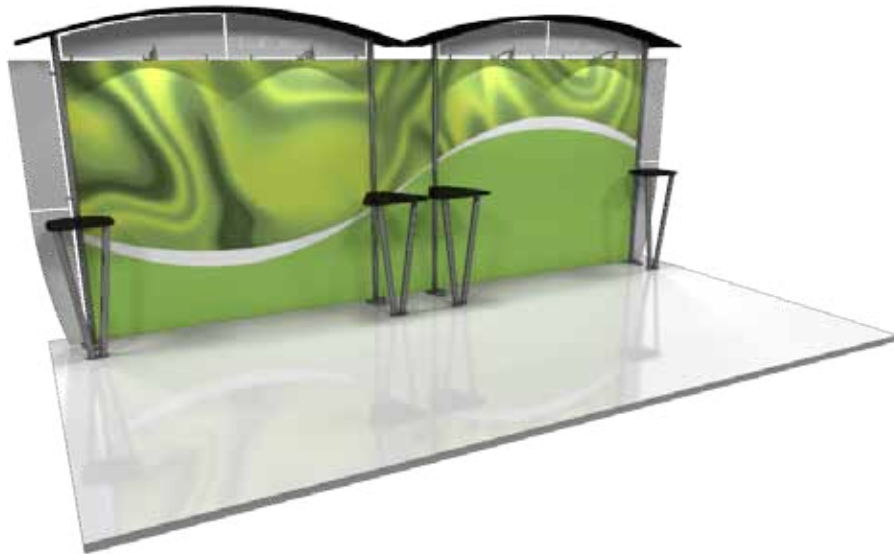# Linear Pro Kit 26

LN-K-3P-26
Linear Pro Kits provide a modern, slick and stylish appearance. The extrusion based exhibits feature a **NEW** velcro-applied fabric center graphic, UV printed or frosted plex headers and wings, as well as a pillowcase fabric canopy.

features and benefits:

- Custom appearance
- Easy to assemble
- **NEW** velcro-applied fabric center graphic
- Comes with your choice of frosted plex or PVC graphic wings and headers
- Pillowcase C-shaped fabric canopies
- Installation tool included

- Aluminum construction: vertical extrusions 75 mm x 50 mm
- Table tops available in four color options
- Kit includes four OCH cases, four v-leg tables, and four 50 watt spotlights
- Lifetime hardware warranty against manufacturer defects

dimensions:

Hardware	Graphic
Assembled unit: 120"w x 99.4"h x 30.625"d approx. 3048mm(w) x 2525mm(h) x 778mm(d)	**Header panels:** Total visible area: 118.5"w x 11.05"h 3010mm(w) x 280.7mm(h)
	Wing panels: Total visible area: 10.4"w x 84"h 264mm(w) x 2134mm(h)
Shipping	**Right and left panels:** Total visible area: 93.74"w x 84"h 2381mm(w) x 2134mm(h)
Shipping dimensions - ships in four cases OCH case: 48"l x 24"w x 10"h 1219mm(l) x 610mm(w) x 254mm(h)	**Center panel:** Total visible area: 22.25"w x 84"h 565mm(w) x 2134mm(h)
Approximate shipping weight (entire kit): 275 lbs/ 124.7 kg	**Total visible area:** 230.3"w x 94.3"h 5849.6mm(w) x 2395.2mm(h)
	Refer to related graphic template for more information

additional information:

Panel materials:
Center graphic: Oxford

Headers & wings:
Single-sided frosted acrylic, or printed PVC
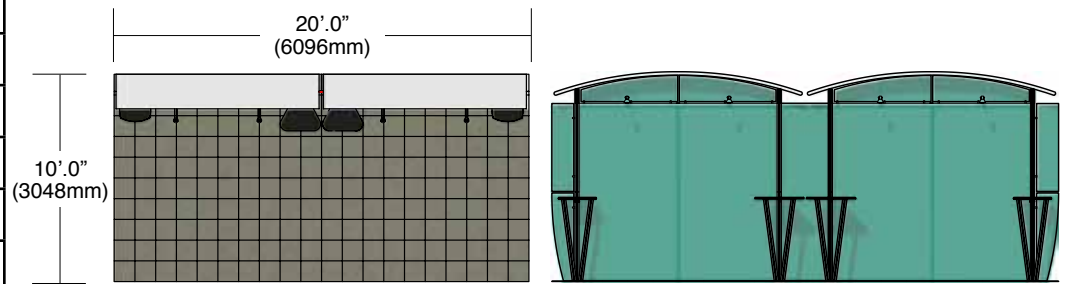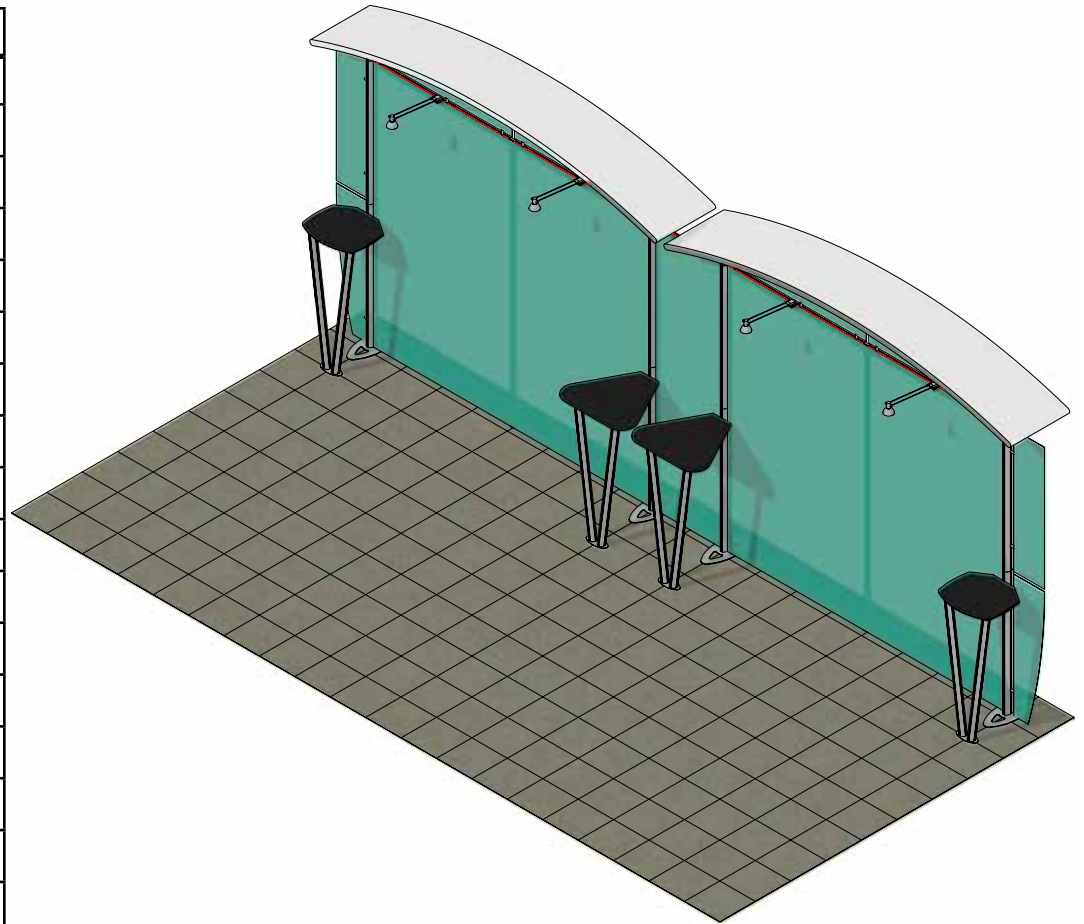
Table top color options:

silver   black   mahogany   natural
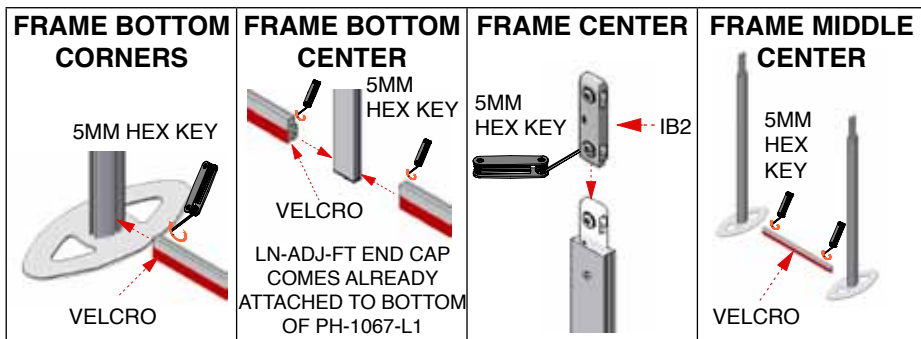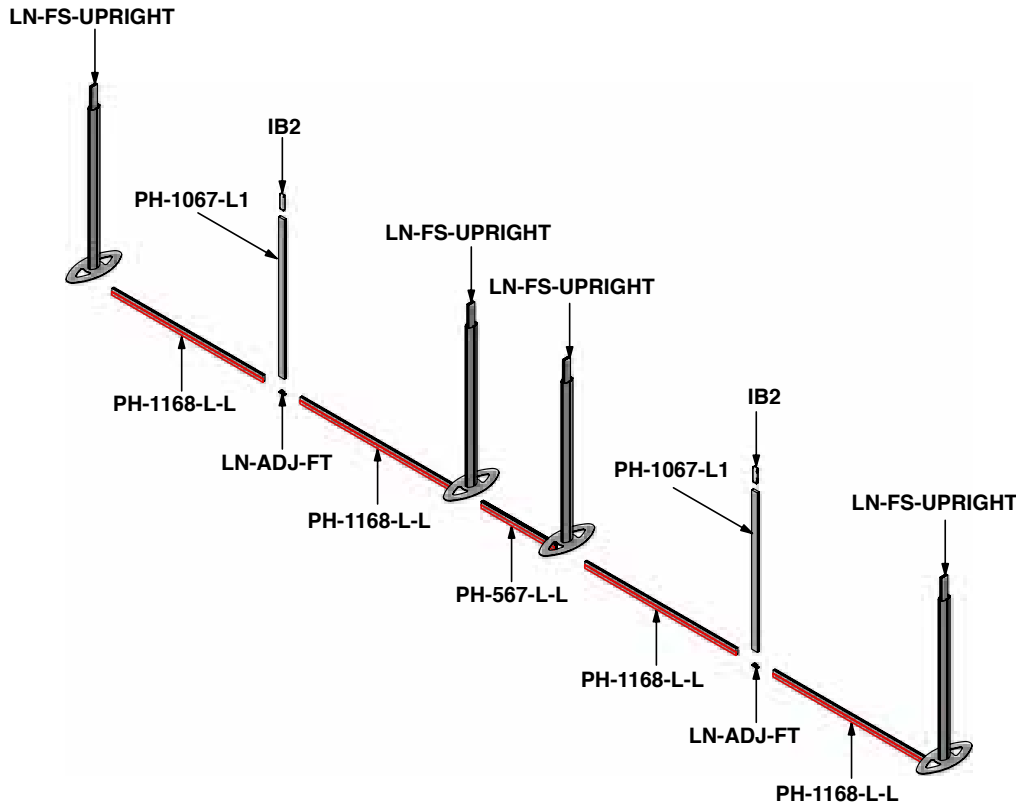
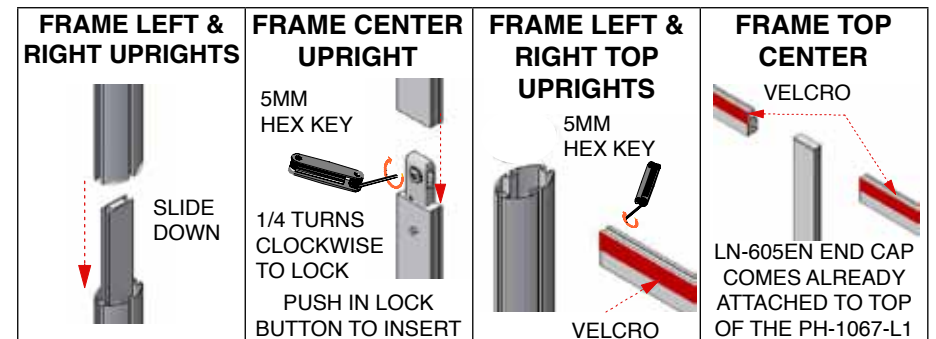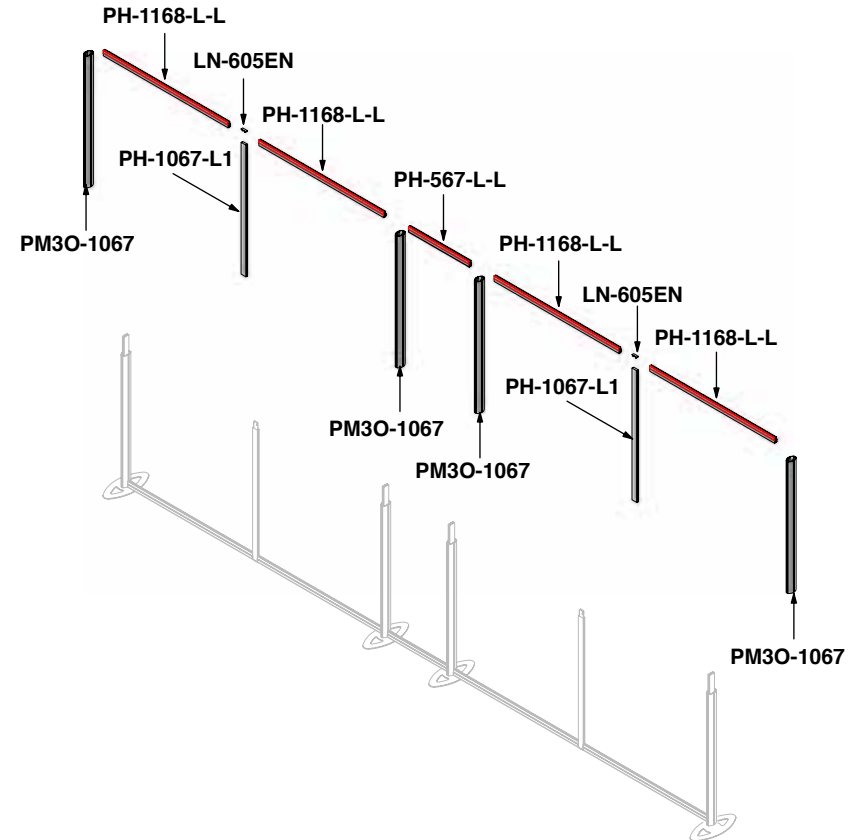| Parts Included		
Part Label	**Qty**	**Part Description**
LN-FS-UPRIGHT	x4	LN-FS-UPRIGHT - LINEAR UPRIGHT WITH FOOT
PH-1168-L-L	x8	1168MM (46") LENGTH OF PH EXTRUSION WITH CAM LOCK BOTH SIDES
PH-1067-L1	x4	1067MM (42") PH LOCK HOLE ONE SIDE
PH-567-L-L	x2	567MM PH WITH LOCK ONE END & CAP
LN-ADJ-FT	x2	LINEAR ADJUSTING FOOT
IB2	x2	INLINE BRACKET
PM3O-1067	x4	1067MM (42") PM3O OPEN ENDS
LN605-EN	x2	PH END CAP
WME-1000	x12	1000MM (39.375") WIRE MANAGEMENT EXTRUSION W/ VELCRO
LN-10X10-FG	x2	LINEAR 10X10 FABRIC CENTER GRAPHIC
LN-26-HW-A-G	x1	LINEAR KIT 26 HEADER/WING GRAPHIC A
LN-26-HW-B-G	x1	LINEAR KIT 26 HEADER/WING GRAPHIC B
LN-26-HW-C-G	x1	LINEAR KIT 26 HEADER/WING GRAPHIC C
LN-26-HW-D-G	x1	LINEAR KIT 26 HEADER/WING GRAPHIC D
LN-26-HW-E-G	x1	LINEAR KIT 26 HEADER/WING GRAPHIC E
LN-26-HW-F-G	x1	LINEAR KIT 26 HEADER/WING GRAPHIC F
LN-26-HW-E-G	x1	LINEAR KIT 26 HEADER/WING GRAPHIC G
LN-26-HW-F-G	x1	LINEAR KIT 26 HEADER/WING GRAPHIC H
LN-CAN-K-C	x2	LINEAR CANOPY KIT, C-SHAPE
LN-TBL-V-LEG-STD	x2	LINEAR V-LEG STANDARD TABLE TOP *FINISH MAY VARY
LN-TBL-V-LEG-TRI	x2	LINEAR V-LEG TRIANGLE TABLE TOP *FINISH MAY VARY
CKAPS	x20	CABLE KIT, 7MM PANEL SUPPORT (MULTI ANGLE) AKA LN-P0114-WNT1
PHFC2-150-L	x4	150MM PHFC2 W/ONE LOCK
LN-LT-FXT	x4	LINEAR LIGHT FIXTURE HOLDER
LUM 8	x4	LUMINA 8 LIGHT
ALLEN KET SET	x2	ALLEN KEY MULTI-TOOL (HEX KEY TOOL)

20'.0"
(6096mm)

10'.0"
(3048mm)

1.

Step 1. Assemble the bottom of the frame

Using the 5MM HEX KEY, attach each PH-1168-L-L and both sides of the PH-567-L-L to the LN-FS-UPRIGHT's with the velcro facing front. Attach the opposite ends of the PH-1168-L-Ls to the PH-1067-L1 uprights using the 5MM HEX KEY. Once all are attached, use the 5MM HEX KEY to depress the IB2 lower button and insert into the top of the PH-1067-L1s, DO NOT LOCK.
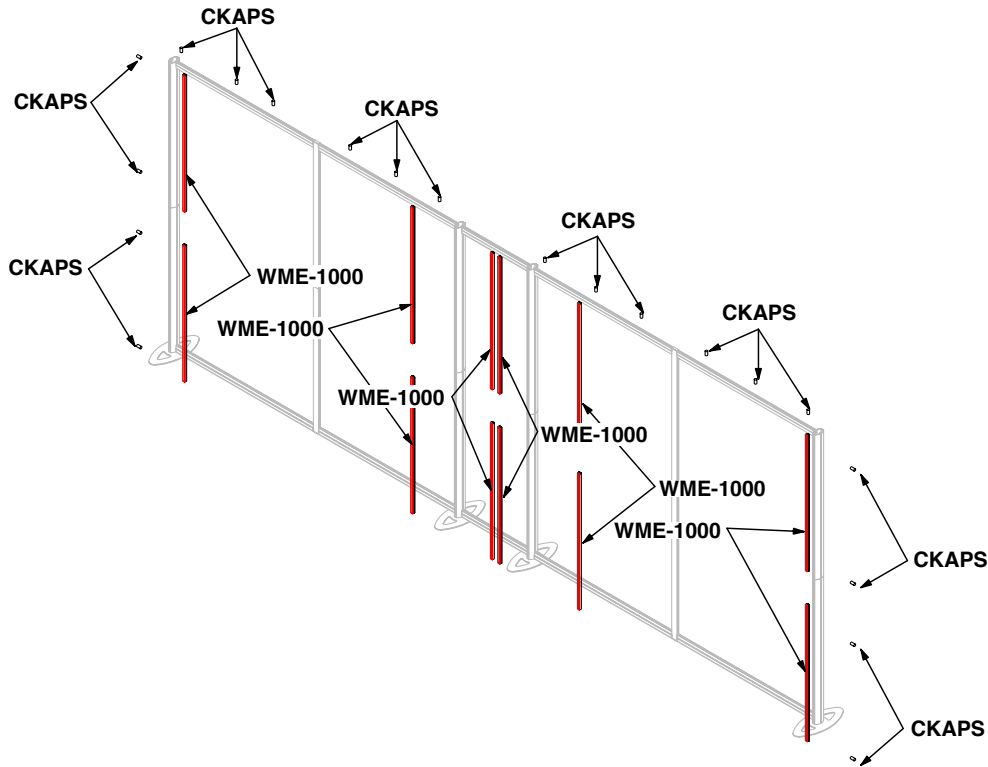
LN-FS-UPRIGHT
IB2
PH-1067-L1
LN-FS-UPRIGHT
LN-FS-UPRIGHT
PH-1168-L-L
LN-ADJ-FT
IB2
PH-1067-L1
PH-1168-L-L
LN-FS-UPRIGHT
PH-567-L-L
PH-1168-L-L
LN-ADJ-FT
PH-1168-L-L

FRAME BOTTOM CORNERS
5MM HEX KEY
VELCRO

FRAME BOTTOM CENTER
5MM HEX KEY
VELCRO
LN-ADJ-FT END CAP COMES ALREADY ATTACHED TO BOTTOM OF PH-1067-L1

FRAME CENTER
5MM HEX KEY
IB2

FRAME MIDDLE CENTER
5MM HEX KEY
VELCRO
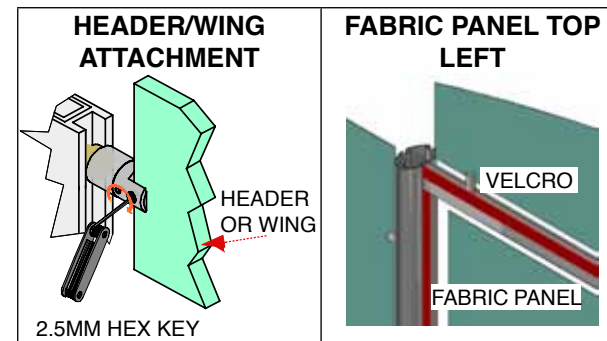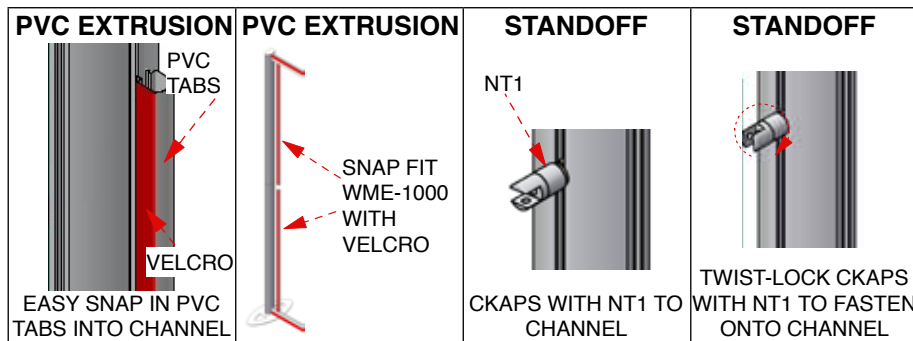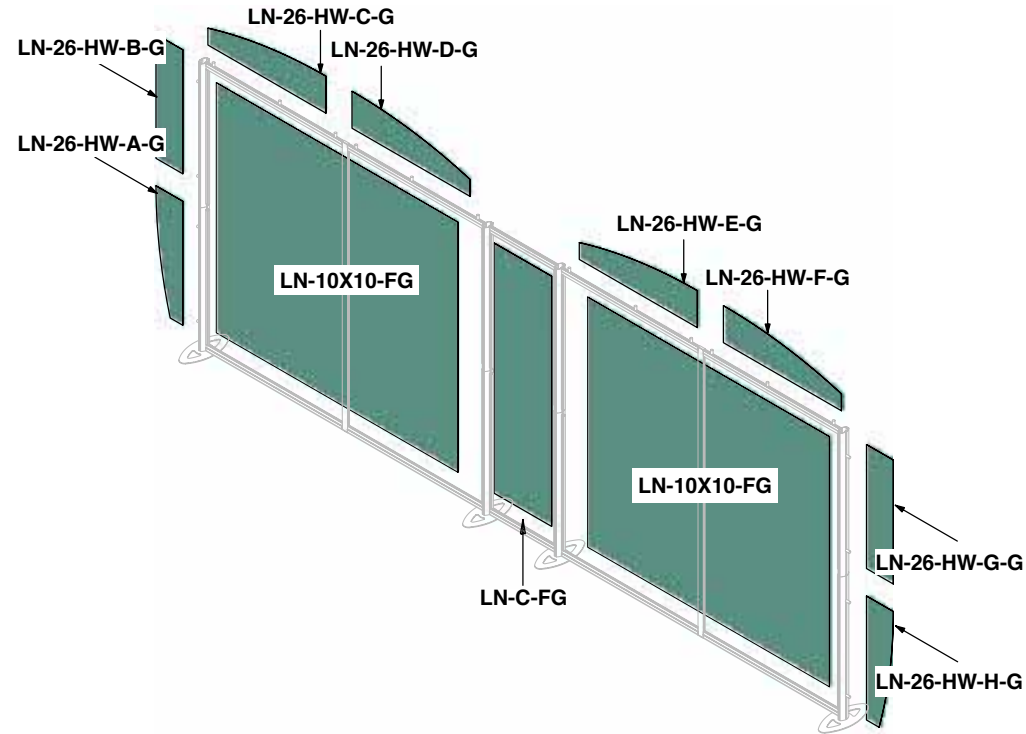
Step 2. Assemble the top of the frame

Make sure the velcro is facing towards the front and slide the left and right PM3O-1067s onto the LN-FS-UPRIGHT on the left and right ends of the frame. Push in the lock button to slide and attach the two PH-1067-L1s to the IB2s below, then lock both buttons. Attach PH-1168-L-Ls and the PH-567-L-L to the PM3O-1067s and PH-1067-L1s using the 5MM HEX KEY.

PH-1168-L-L
LN-605EN
PH-1168-L-L
PH-1067-L1
PH-567-L-L
PM3O-1067
PH-1168-L-L
LN-605EN
PH-1168-L-L
PH-1067-L1
PM3O-1067
PM3O-1067
PM3O-1067

FRAME LEFT & RIGHT UPRIGHTS
SLIDE DOWN

FRAME CENTER UPRIGHT
5MM HEX KEY
1/4 TURNS CLOCKWISE TO LOCK
PUSH IN LOCK BUTTON TO INSERT

FRAME LEFT & RIGHT TOP UPRIGHTS
5MM HEX KEY
VELCRO

FRAME TOP CENTER
VELCRO
LN-605EN END CAP COMES ALREADY ATTACHED TO TOP OF THE PH-1067-L1

2.

Step 3. Attach graphic support & adhere CKAPS for graphic headers/wings

Snap attach the WME-1000 (graphic support) onto the frame inside the left and right uprights of the left, center, and right frame sections. Make sure the velcro is facing towards the front. Insert the 20 CKAPS into the outside perimeter channels and turn clockwise to lock, other locking screws should be loose. Evenly space out the standoffs for each header or wing.
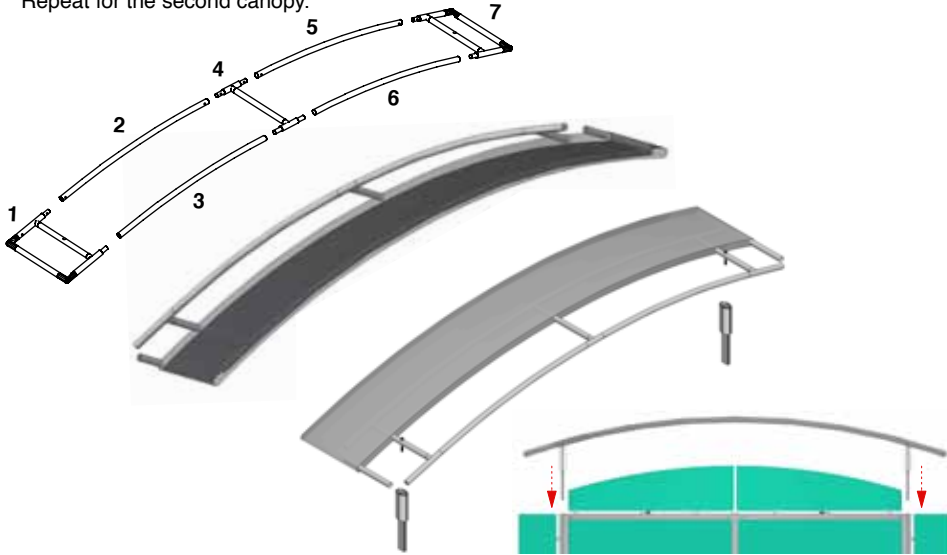
CKAPS

CKAPS

CKAPS

CKAPS

CKAPS

CKAPS

CKAPS

WME-1000

WME-1000

WME-1000

WME-1000

WME-1000

WME-1000

CKAPS

CKAPS

PVC EXTRUSION	PVC EXTRUSION	STANDOFF	STANDOFF
PVC TABS	SNAP FIT WME-1000 WITH VELCRO	NT1	
VELCRO			TWIST-LOCK CKAPS
EASY SNAP IN PVC TABS INTO CHANNEL		CKAPS WITH NT1 TO FASTEN CHANNEL	WITH NT1 TO FASTEN ONTO CHANNEL

Step 4. Attach graphic headers/wings, right and left graphic, and center graphic

Insert the wing and header panels into CKAPS 7mm wide channel, lock in the panels and tighten all of the screws. Velcro attach the LN-10X10-FG (left & right large fabric graphics) and the LN-C-FG (center fabric graphic) to the frame starting at the top left corner. Continue to velcro attach the graphics to the frame ending in the bottom right corner.

LN-26-HW-C-G

LN-26-HW-B-G

LN-26-HW-D-G

LN-26-HW-A-G

LN-26-HW-E-G

LN-10X10-FG

LN-26-HW-F-G

LN-10X10-FG

LN-26-HW-G-G

LN-C-FG

LN-26-HW-H-G

HEADER/WING ATTACHMENT	FABRIC PANEL TOP LEFT
HEADER OR WING	VELCRO
2.5MM HEX KEY	FABRIC PANEL

3.
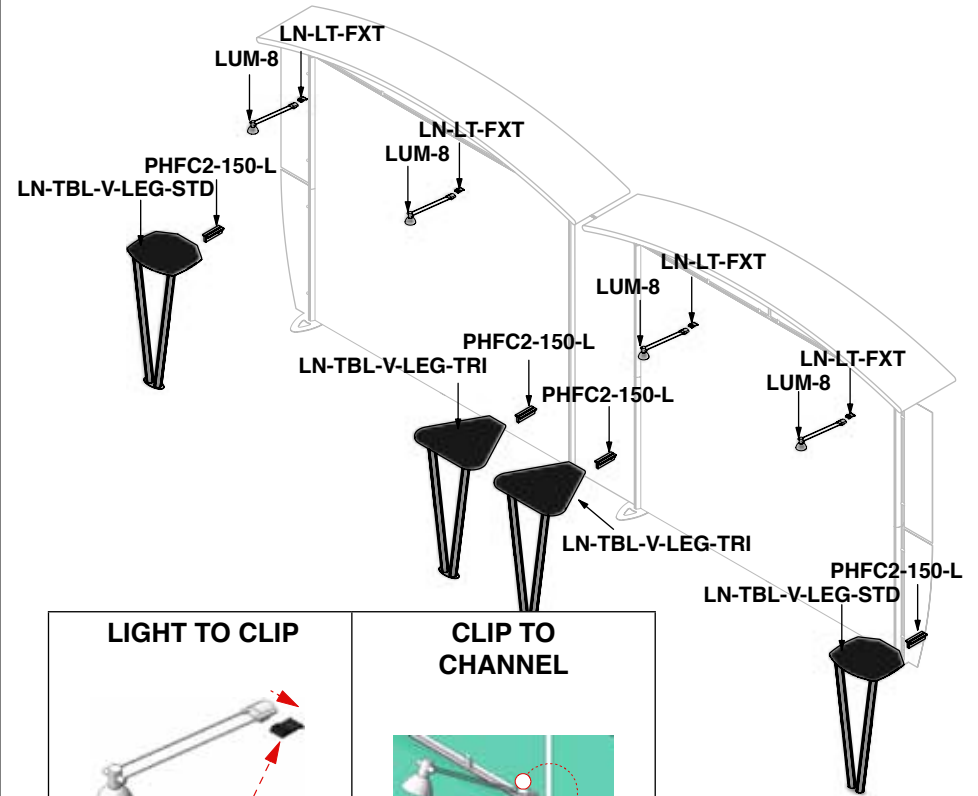
Step 5. Attach c-shaped canopies

Assemble each frame in order using the number key to attach the tubes and hubs. Pull over the pillowcase and insert the screws through frame parts 1, 7, and the pillowcase slots. Loosely fasten canopy post mounts to screws, DO NOT ZIPPER. Last, slide the post mounts onto the frame and tighten using the 8MM HEX KEY, then zipper the pillowcase. Repeat for the second canopy.

C-CANOPY FRAME	**C-CANOPY PILLOW CASE & SCREW**	
PUSH PINS TO ASSEMBLE THE FRAME	PILLOW CASE SCREWS SLOTS	
C-CANOPY SCREW & SHORT POST	**C-CANOPY POST TO BACKWALL**	**C-CANOPY POST TO BACKWALL**
SHORT POST — LOOSELY FASTEN CANOPY POST MOUNTS TO SCREWS	SLIDE IN POST MOUNTS ONTO FRAME	TIGHTEN SCREWS WITH 8MM HEX KEY THEN ZIPPER PILLOW CASE

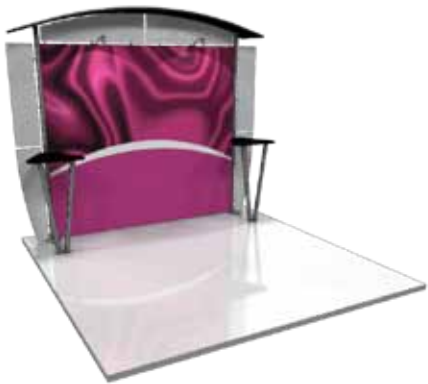## Step 6. Assemble lights & tables & attach to backwall

Slide the light fixture LUM-8 onto the light clip LN-LT-FXT. Lift and rest light clip onto top of horizontal channel and run the wires in between and behind the panels. Slide the PHFC2-150-L into the underside of the table. Fasten the table legs to the underside of the table top using the THUMB SCREWS. Once finished turn table over and attach it to the backwall frame (LN-FS-UPRIGHT) using the 5MM HEX KEY on the PHFC2-150-L. Repeat for all of the other table.
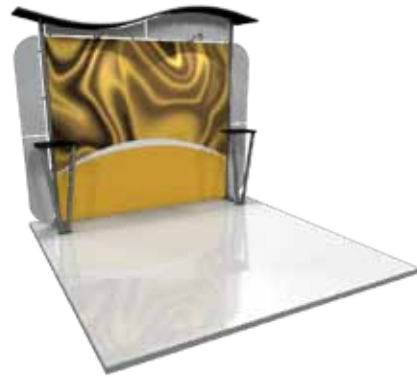
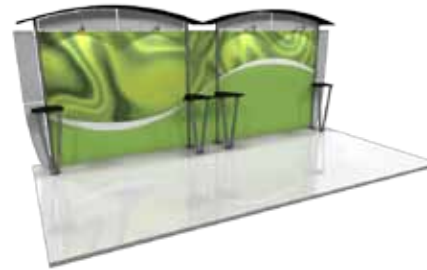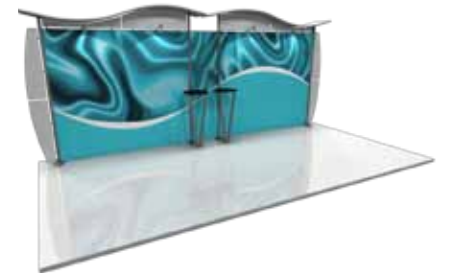| **LIGHT TO CLIP**	**CLIP TO CHANNEL**	
LN-LT-FXT / LUM-8		
TABLE TOP	**TABLE LEG**	**TABLE SETUP**
PHFC2-150-L / PHFC2-150-L — ATTACH PH END CAP'S TO PHFC2-150-L'S	APPLY V-LEG ONTO UNDERSIDE OF TABLES WITH THUMB SCREWS	LN-FS-UPRIGHTS — 5MM HEX KEY

Check out these related products:

Linear Pro Kit 22

Linear Pro Kit 25

Linear Pro Kit 26

Linear Pro Kit 27